


veloboy

Which measures are important?

3. The space above the handle bar must be at least 5 cm so that you can transport your bike with the veloboy. If you have a bike with a suspension fork then you can reduce the height of your bike with our height adjuster. A suspension fork with a travel of 100mm you can reduce the height about 80mm.

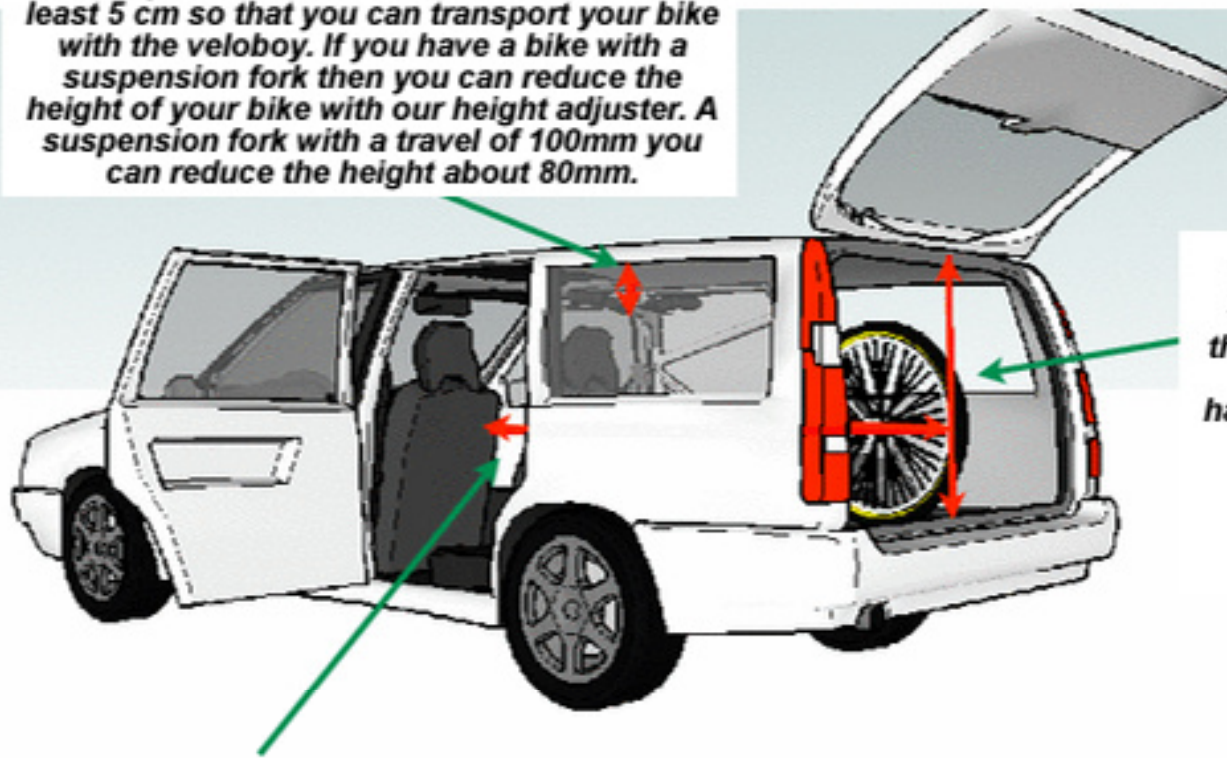

2. Compare the height of the loading hatch with the height of the handle bar and the height of the saddle-tube. The hatch may be slightly less in height than the handle bar but not the saddle-tube.

1. Compare the length of the interior when the rear bench seats are turned over with the length of your bike without frontwheel. The interior should have 5 - 10 cm more in length than the bike without frontwheel.